

# MG-102WD USER MANUAL



## Parts and Accessory




EMR Pen



Pen Nib



Nib Clip

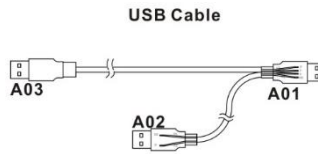


USB Cable




Driver Installer

## Font Side

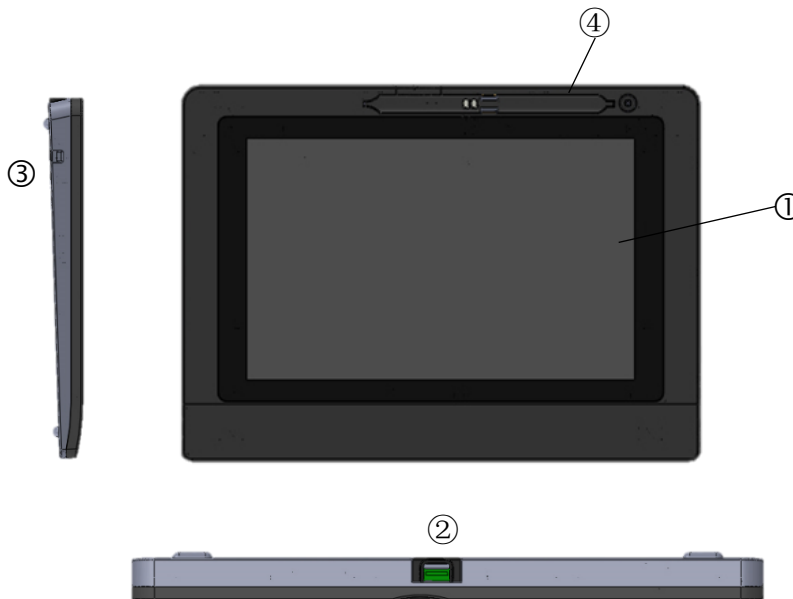


1. Display and Active Area
2. USB port for display and touch input connection
3. Docking lock
4. Pen Holder and Charger

## Rear Side

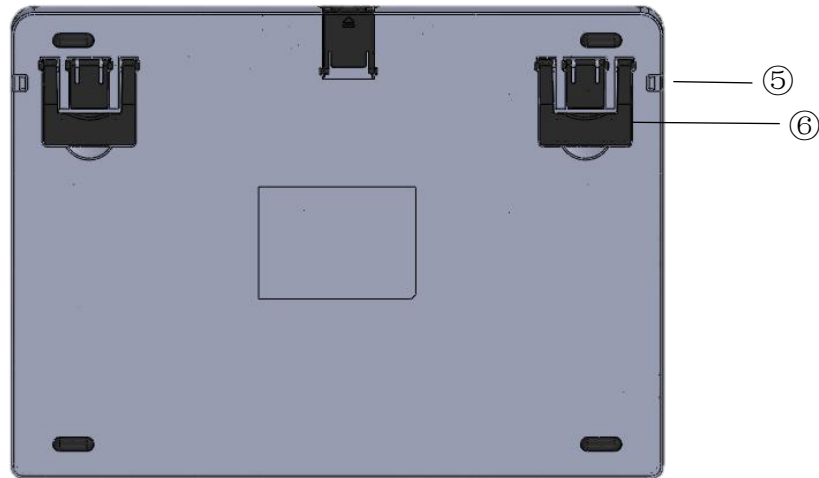

- 5. Pen Lanyard hole ( ×2 )
- 6. Stand ( ×4 )

## How to connect device to PC

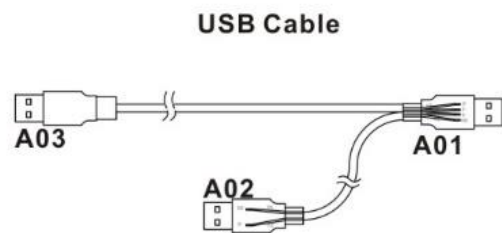

- 1: A01- insert on your Desktop or Laptop USB Port
- 2: A02- extra power support (insert only if needed)
- 3: A03- insert on device USB port

## << How to Install Driver >>



1. Driver version : Please check if the driver version is correct,

CD Version : [TouchSetup-1.0.6038.7](#)

2. If you have installed driver before, please uninstall the old version or other vender' s driver and restart windows pc before installing new driver.

Process: Uninstall old driver → re-start Windows PC → connector Morgan Touch hardware → install new driver

3. After install new driver, please click up the folder name "LingShangTouch" → click Touch Center to run the driver

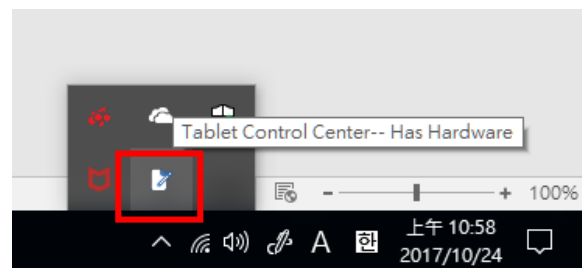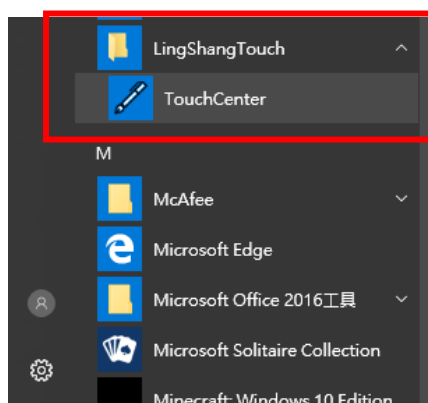


4. Check the driver : please check the driver icon on the conner of desktop :

White color means has Hardware · Black color means no hardware

Driver icon: white

OK, Has Hardware

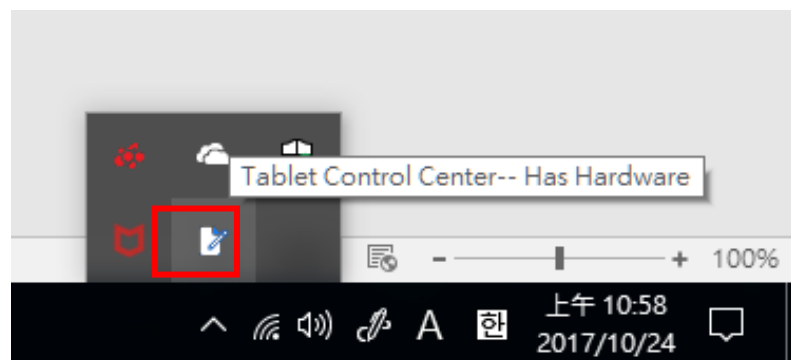

Driver icon: Black  
No Hardware



## << Other notices >>

- i. 4.1, due to Windows 7 driver digital signature is the old version. If the digital signature is shown as an old version or the function is incomplete after installing the driver on the Windows 7 system, it is recommended to perform the Windows 7 security update (update KB3033929)

➤ **Microsoft official download URL :**

<http://www.microsoft.com/zh-cn/download/details.aspx?id=46078>

- ii. Download .NET Framework 4.5.2 version or above

➤ **Microsoft official download URL :**

<https://www.microsoft.com/net/download/dotnet-framework-runtime/net452>

- Windows 8 · Windows 10 and above are all new driver digital signature.  
No update is required.
- If you update Windows 7 O/S regularly, no update is required.